

#### HOW TO DISASSEMBLE & CLEAN YOUR





### REMOVE (4) #10 SCREWS USING 1/8" ALLEN WRENCH FROM THE BOTTOM OF YOUR SV-8C MANIFOLD




WITH THE (4) #10 SCREWS REMOVED, THE LOWER MOUNTING BASE PLATES CAN BE REMOVED AND SET ASIDE




REMOVE (4) #10 SCREWS USING 9/64" ALLEN WRENCH FROM THE BOTTOM OF YOUR SV-8C MANIFOLD



WITH THE (4) #10 SCREWS REMOVED, THE TOP CAP CAN BE CAREFULLY REMOVED AND SET ASIDE

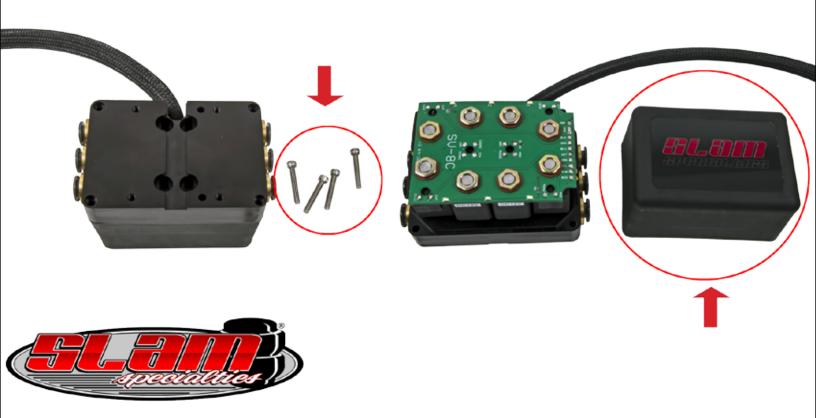

## USING A 1/2" SOCKET WRENCH CAREFULLY REMOVE THE (8) 8MM HEX NUTS AND FIBER WASHERS AND SET ASIDE

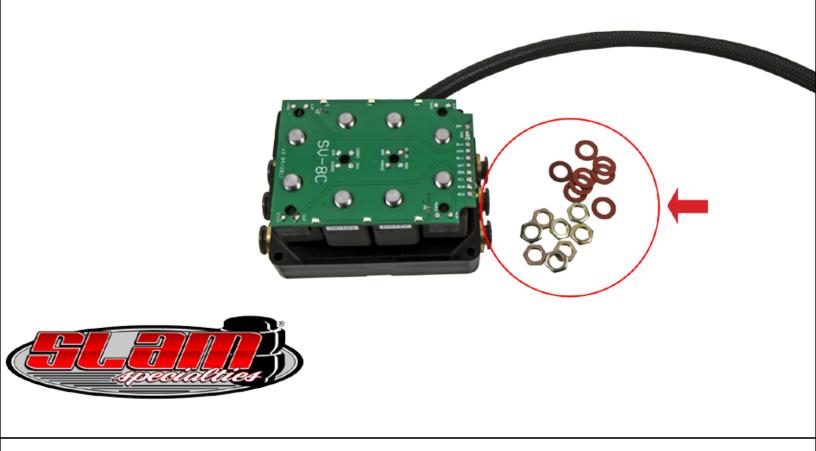



USING A 9/16" SOCKET WRENCH LOOSEN AND REMOVE (8) ARMATURES AND PLUNGERS. BE AWARE OF PLUNGERS AS THEY ARE SPRING LOADED



INSPECT MANIFOLD AND PLUNGERS FOR ANY DEBRIS, THAT MAY BE CAUSING AN ISSUE. WASH YOUR SV-8C MANIFOLD AND PLUNGERS WITH A MILD DISH SOAP AND WATER, RINSE WELL AND LET AIR DRY





#### HOW TO REASSEMBLE YOUR






ADD WHITE LITHIUM GREASE ONTO THE THREADS OF THE ARMATURES, INSTALL THE ARMATURES AND PLUNGERS ONTO YOUR SV-8C MANIFOLD. USING A 9/16" SOCKET WRENCH TIGHTEN (8) ARMATURES



INSTALL THE COIL PACKS ONTO YOUR SV-8C MANIFOLD, ROUTE THE WIRE HARNESS THROUGH THE MANIFOLD AND KEEP WIRES CLEAR OF BEING PINCHED BETWEEN THE COILS AND ARMATURES

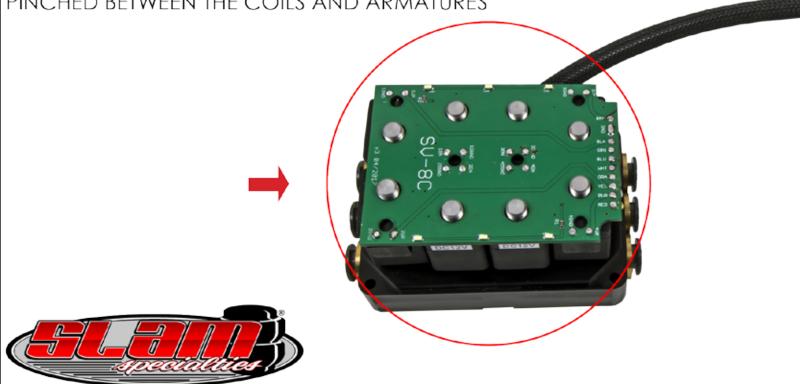



MAKE SURE ALL WIRES ARE CLEAR AND NOT DAMAGED.

CAREFULLY REINSTALL YOUR SV-8C TOP CAP



INSTALL (4) #10 SCREWS USING A 9/64" ALLEN WRENCH.
"DO NOT OVER TIGHTEN". IF VALVE MUFFLERS WERE REMOVED REINSTALL
THEM NOW, THERE ARE (3) MUFFLERS PER EXHAUST PORT







# AFTER CLEANING REINSTALL YOUR SV-8C ONTO YOUR VEHICLE. IF YOU ARE CONTINUING TO EXPERIENCE FURTHER ISSUES

PLEASE CONTACT US AT INFO@SLAMSPECIALTIES.COM OR AT 559.348.9038